

PART OF 21151 (TORQUE 1.5-2.5 INLBs)  
890029(2). ORDER SCREW SEPARATELY AS 816778.

8<sup>59</sup>/<sub>64</sub>" REF.

PART OF 21151 (TORQUE 1.5-2.5 INLBs)  
890030(2). ORDER SCREW SEPARATELY AS 816726.

NOTES:

- TIGHTEN TO 1.5-2.5inlb AND APPLY A DROP OF ADHESIVE (PERMA-LOK MM115 or LOCTIE 262) TO SET SCREW(890008) PRIOR TO ASSY INTO TANG(813326).

811372- TANG ASS'Y. (INCLUDES TANG & PIN & SPRING ADAPTER)  
857045- INSTRUCTION SHEET  
857273- SERVICE INSTRUCTIONS

1<sup>47</sup>/<sub>64</sub>"

LEGEND: ( ) = QUANTITY/TOOL  
\* = QUANTITY/MULTI-PAK

**WARNING: DO NOT MIX BATTERY TYPES BETWEEN 21152 AND THIS PCB!**

21370 PC BOARD w/  
BATTERY(21339) &  
FISH PAPER(10413)

816307, LABEL,  
TOP & BOTTOM COVER


B

ϕ 17<sup>1</sup>/<sub>32</sub>"

816728(1)-10\* SET SCREW, TRIGGER

ϕ 11<sup>1</sup>/<sub>64</sub>"

DETAIL B  
SCALE 1 : 1

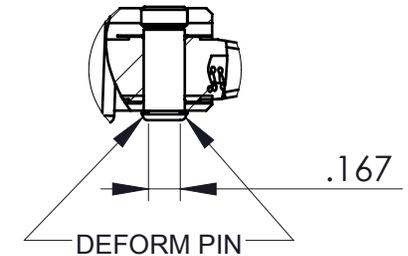

816799- THIS PIN IS FORMED OVER  
**CUSTOMER MUST GRIND OFF FORMED END & INSTALL THIS PIN FORMING THE HEAD OVER THE RETAINING RING AS SHOWN.**

813326(1)-  
TANG

816897(1)-10\*  
RETAINING RING

814171(1)  
CASE

812352(1)  
GRIP

816878(2)-20\*  
BELLEVILLE  
WASHER

816871(1)-5\*  
PAWL LINK

812583(1)  
TORQUE BLOCK

812349(1)  
TORQUE SPRING

816867(1)-10\*  
PIN & SPRING  
ADAPTER

812200(1)  
SPACER

816847(1)-10\*  
INT. LOCK WASHER

816799(1)-5\*  
HEAD BEARING PIN  
(INCLUDES RETAINING RING)

816892(1)-10\*  
1/4" STEEL BALL

812205(1)  
ADJUSTING PLUG

812224(1)  
LOCK PLUG

816870(2)-10\*  
PAWL PIN